

Pocket Organ C3B3: MIDI Implementation Chart

Basic Information

	Transmit/Export	Recognize/Import	Remarks
Basic Channel	X	1-16	Channel 1,4-16: Upper Keyboard Channel 2: Lower Keyboard Channel 3: Pedalboard
Mode	X	Mode 3: Omni Off, Poly	
Note Number	X	0-127	
Velocity	X	X	
After Touch	X	X	
Pitch Bend	X	X	
Control Change	X	0	<i>See Control Change Messages</i>
Program Change	X	0-9	Used to choose preset
System Exclusive	X	X	
System Common	X	X	
System Real Time	X	X	
Aux Messages	X	X	
Notes	X	X	

Control Change Messages		
Control #	Function	Remarks
0	Bank Select MSB	Bank 0-7: Choose Preset Pack Bank 100,101: User Preset NOTICE: You need to purchase preset packs to use banks other than 0 and 1
70-78	Drawbars	CC#70: 16', CC#71: 5 1/3', CC#72: 8' ...
80	Rotary Speaker Speed	Slow(0-63) / Fast(64-127)
81	Rotary Speaker Switch	Off(0-63) / On(64-127)
85	Upper Vibrato Switch	Off(0-63) / On(64-127)
86	Lower Vibrato Switch	Off(0-63) / On(64-127)
87	Vibrato Type	V1(0-21) / C1(22-42) / V2(43-63) / C2(64-84) / V3(85-105) / C3(106-127)
93	Key Click	Off(0-63) / On(64-127)
94	Percussion Switch	Off(0-63) / On(64-127)
95	Percussion Harmonic	2nd(0-63) / 3rd(64-127)
102	Percussion Volume	Norm(0-63) / Soft(64-127)
103	Percussion Decay	Slow(0-63) / Fast(64-127)
82	Reverb Level	
111	Overdrive Level	
7	Volume	